


configurazioni allacciamenti

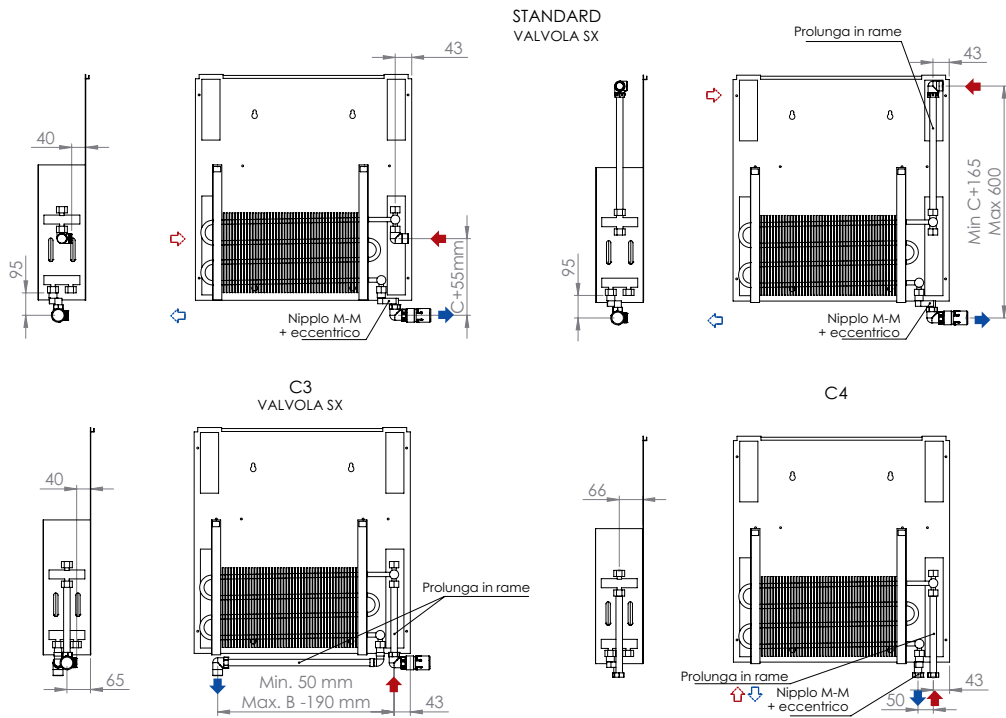

Per le configurazioni standard la valvola termostatica è da montare sul ritorno.  
 For standard configurations the thermostatic valve needs to be fitted on the return flow.  
 Pour les configurations standard, la vanne thermostatique est à installer sur la sortie.  
 Para las configuraciones estandard montar la válvula termostatica en la vuelta.